


MinuteStand Set Up Instructions

CAUTION! Before proceeding read this!

- Make sure all Tension wands are fully inserted into Ball Hub and never let go of a wand until you relieve all tension.
- Do not over bend wands, breakage may occur.
- Use factory original parts only. Do not use parts which have become worn, damaged or have been repaired by others.

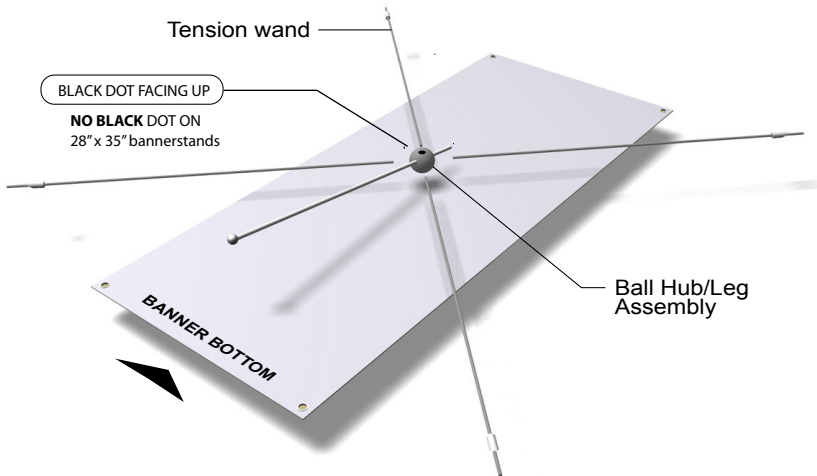

Step 1

- Lay banner face down on a clean surface.
- Lay Ball Hub/Leg Assembly at center of banner.
NOTE: Leg must face bottom of banner and angle upward with BLACK DOT facing up. NO BLACK DOT ON 28" x 35" bannerstands
- Place (4) Tension wands in silver holes of ball hub as shown.
NOTE: The angled face of the stopper at the end of each Tension wand should face down.



Step 2

- Start with (2) upper Tension wands, place them into the grommet holes at the upper corners of the banner.
- Place the (2) lower Tension wands into the grommet holes at the bottom corners of the banner. Wands will bend into place easily.

Step 3

Stand display upright and slide ball hub into desired position. Move black rubber collar on leg directly under ball to secure ball in position.

To Disassemble: Follow these steps in reverse order

